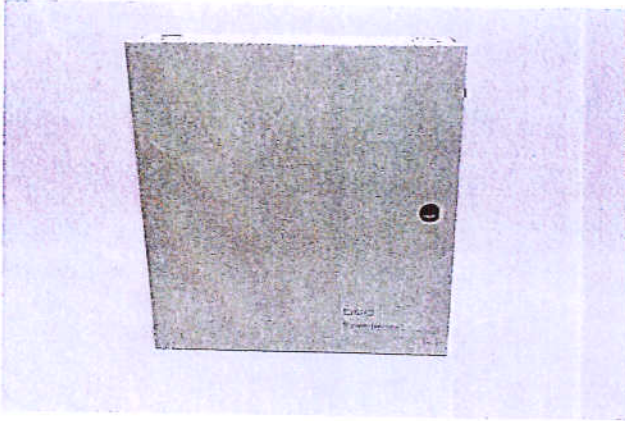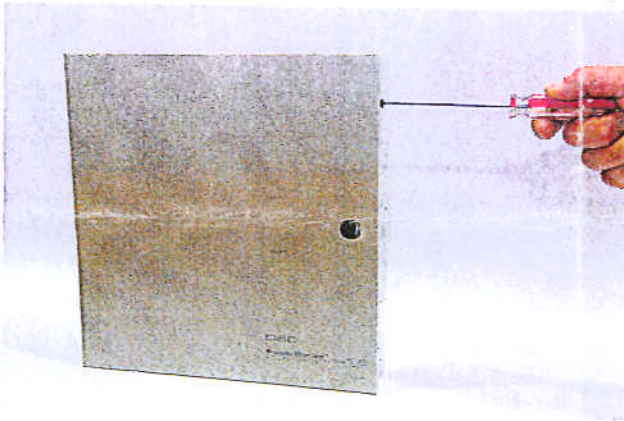# How to Change your Alarm Panel Battery

1. Locate the Alarm Panel in the basement near the electrical panel.

2. Locate the screws on the side of the alarm box and remove them.

3. Unplug both the red + positive wire lead, and the black - negative lead from the old battery

4. Replace old battery with new battery

5. Reconnect both the red + positive wire lead, and the black - negative lead to the new battery